



⚠ WARNING/CAUTION

- **DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.**
- **TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND MAINTENANCE OF THIS UNIT SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.**
- **REMOVE THE FIXTURE, PARTS AND PARTS BAG(S) FROM THE CARTON. BEFORE DISCARDING THE CARTON, DOUBLE CHECK TO MAKE CERTAIN THAT ALL PARTS ARE FOUND. INSPECT THE FIXTURE PRIOR TO INSTALLATION FOR ANY DAMAGE TO THE FIXTURE.**
- **DIMMING: THE FIXTURE CAN BE CONTROLLED BY A WALL DIMMING DEVICE. ONLY USE TRIAC/ELECTRONIC DIMMER. MAKE SURE THE CARTON IS MARKED FOR USE WITH LED COMPACT FLUORESCENT-INCANDESCENT LIGHT SOURCE ONLY. THESE CAN BE PROVIDED BY YOUR LOCAL ELECTRICAL DISTRIBUTOR, HOME CENTER, OR HARDWARE STORE.**
- **PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS**

FIXTURE INSTALLATION

1. Feed the wire through the STEM (Q) and twist tightly onto the FIXTURE ASSEMBLY (R). Keep adding additional STEM (Q) until your desired hanging height is met.
2. Insert the PLASTIC RING (E) inside the CANOPY (D). Place the CANOPY (D) on top and slide it through the STEM (Q), facing against the ceiling. Fully thread the CONNECTOR (F) onto the STEM (Q) and the NIPPLE (C) onto the CONNECTOR (F). Insert the NIPPLE (C) into the MOUNTING PLATE (N) and secure using TOOTH WASHER (M) and HEX NUT (L).
3. Pull the wires out and install the MOUNTING PLATE (N) onto the ceiling using EXPANSION SCREW (A) and SMALL HEX NUT (B).
4. Trim off the excess wire beyond the STEM (Q) and strip each wire $\frac{5}{8}$ ".
5. See the WIRING INSTALLATIONS PAGE for the wiring guide.
6. Once the wirings are done, attach the TERMINAL BLOCK (K) to the mounting assembly.
7. Lift up the CANOPY (D) up to the ceiling, and secure with ALLEN SCREW (O) and tighten using ALLEN WRENCH (P).
8. Insert the NYLON WASHER (I) to the exposed threads of the FIXTURE ASSEMBLY (R). Attach the GLASS (J) onto the FIXTURE ASSEMBLY (R) and secure with NYLON WASHER (I) and ACORN NUT (H).
9. Install the BULB (G) onto the SOCKET of the FIXTURE ASSEMBLY (R). THIS FIXTURE IS RATED FOR 40 WATT 220 VOLT LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!
10. Restore power to the circuit breaker or fuse box.

PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,F,K,L,M,N	HARDWARE KIT	HDW-4829-CE
D,E,O,P	CANOPY ASSEMBLY	CAS-4829-CE
H,I,J	GLASS ASSEMBLY	GAS-4829-CE
Q	STEM KIT	STM-TC1600-SET

